


DRAWN BY:	MMP	CHECKED BY:	MMP/REF	SCALE:	AS SHOWN
DATE:	7/31/2012	DATE:	REF.		
SEWER INSTALLATION DETAIL					
FILE: C:\DRAWING\DISTIBUTION\EXTENSION\DETAILS\DETAILS BLOCKS EDITOR.dwg					1 of

DETAIL SEWER SERVICE INSTALLATION

NOT TO SCALE

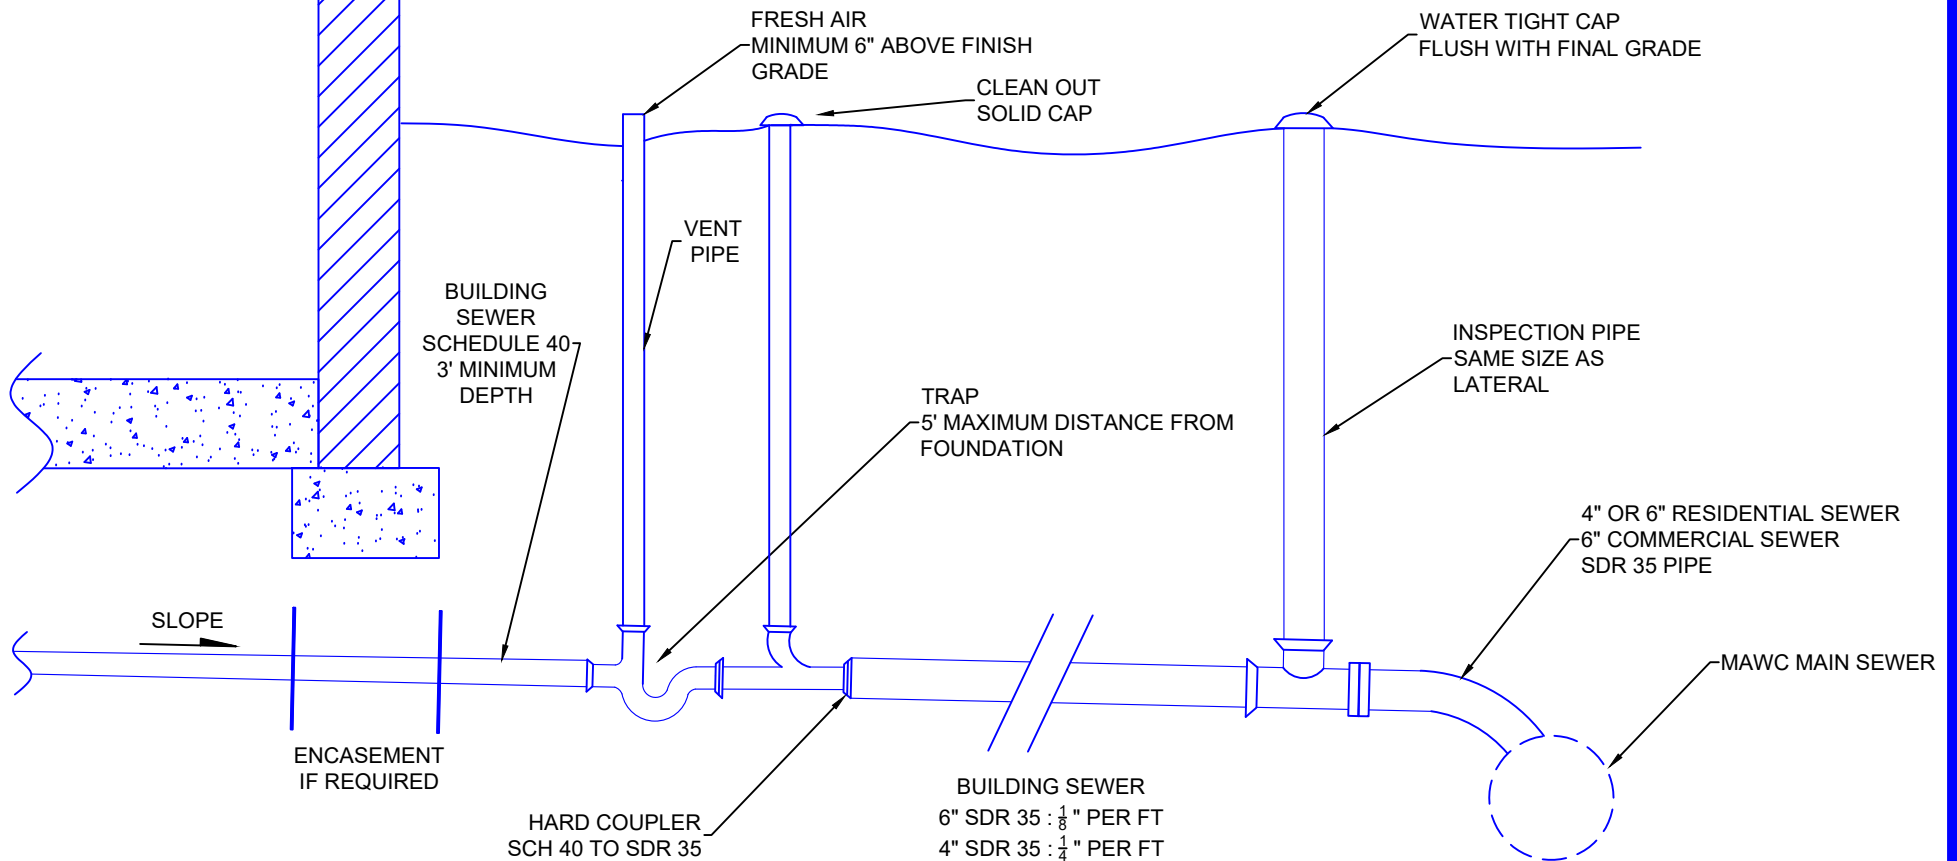

NOTES: **ACCEPTABLE PIPE:** FROM STRUCTURE TO CLEANOUT SCHEDULE 40
AFTER CLEANOUT SDR 35 GASKET JOINT ONLY

1. **PLEASE CALL (724) 834-0966 FOR SERVICE SEWER (LATERAL) INSPECTION BY AUTHORITY PRIOR TO BACKFILLING. A 24 HOUR NOTICE IS REQUIRED.**
2. ALL PIPE IS TO BE BEDDED AND SURROUNDED BY 6" OF FIRMLY PACKED #2 (2B) CRUSHED STONE.
3. A 90 DEGREE BEND OR LONG ELBOW IS REQUIRED FOR TRAP CONFIGURATION ONLY. ALL OTHER 90 DEGREE BENDS WILL REQUIRE TWO 45 DEGREE BENDS WITH A MINIMUM OF 12" SEPARATION
4. FOR LONG LATERALS A CLEAN OUT MUST BE INSTALLED EVERY 100 FT.
5. 4" OR 6" SERVICE SEWER PERMITTED FOR SINGLE FAMILY RESIDENTIAL CONNECTIONS.
6. ALL COMMERCIAL MUST BE AT LEAST 6"
7. INSPECTION PIPE MAY BE AT GROUND SURFACE IF AN APPROVED METAL CAP IS PROVIDED WITH CONCRETE PAD
8. CLEANOUT/INSPECTION TEE PERFORATED CAPS NOT PERMITTED
9. SCH40/SDR GASKET TRANSITION COUPLING MUST BE USED TO CONNECT SCH 40 HOUSE LINES TO SDR SERVICE SEWER. FERNCO MUST BE USED WITH CLAY HOUSE LINES